



Air Lab Werks

Instructions for Removal / Replacement of Lamps

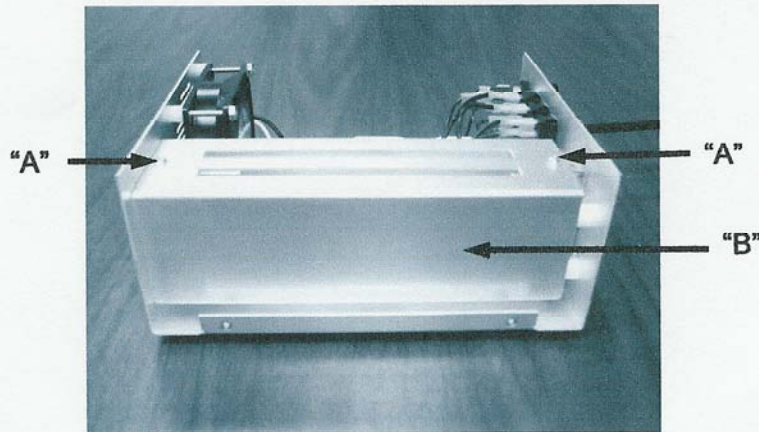

1. Turn off unit, unplug from electrical connection, and allow time for lamps to cool.
2. Remove 4 screws holding cover on unit and gently remove cover.
3. Remove 2 phillips-head screws (A) from top of dwell chamber (B).
4. Lift Dwell Chamber (B) straight up and set aside.

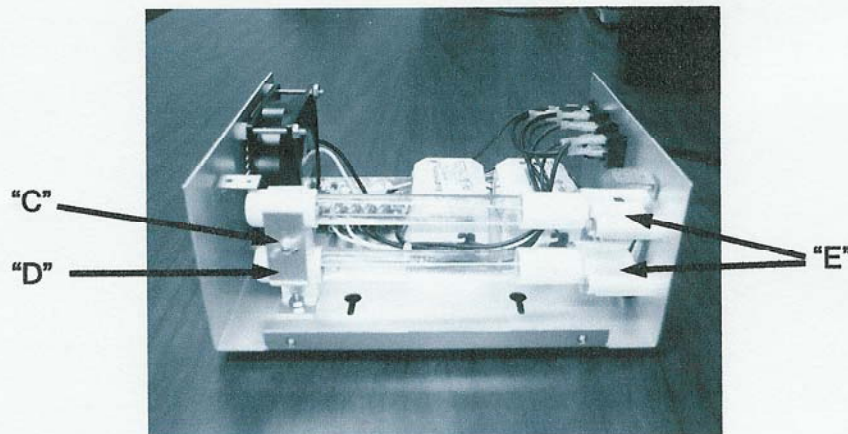

5. Remove wing-nut (C) from lamp stabilizing bracket (D), and gently remove bracket.
6. Gently remove burned-out or non-working lamp from its socket (E). Pull lamp straight out from socket. **_DO NOT TWIST LAMPS!!!!**
7. Insert new replacement lamp into socket by properly aligning pins on base of lamp with pin holes in socket and pushing straight "in" (E). **DO NOT TWIST LAMPS!!!!**
8. Re-install lamp stabilizing bracket (D) and secure it snugly with wing-nut (C). **DO NOT TURN ON LAMPS WITH DWELL CHAMBER REMOVED !**
9. Re-install Dwell Chamber (B).
10. Secure Dwell Chamber with 2 phillips-head screws (A).
11. Re-install cover using 4 screws as before.
12. Locate unit, plug into power supply and turn on.